ONKY-00382

SERIAL No. 3338

ONKYO® SERVICE MANUAL

Integrated Stereo Amplifier
MODEL A-8630

Black and Silver models

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK ⚠ ON THE SCHEMATIC DIAGRAM AND IN THE PARTS LIST ARE CRITICAL FOR RISK OF FIRE AND ELECTRIC SHOCK. REPLACE THESE COMPONENTS WITH ONKYO PARTS WHOSE PARTS NUMBERS APPEAR AS SHOWN IN THIS MANUAL.

MAKE LEAKAGE-CURRENT OR RESISTANCE MEASUREMENTS TO DETERMINE THAT EXPOSED PARTS ARE ACCEPTABLY INSULATED FROM THE SUPPLY CIRCUIT BEFORE RETURNING THE APPLIANCE TO THE CUSTOMER.

TABLE OF CONTENTS

Specifications 2
Precautions 2
Adjustment procedures 3
Chassis exploded view 4
Printed circuit board parts list 6
IC block diagram 9
Block diagram 12
Parts list of packing 13
System connections 13
Front panel facilities 14
Printed circuit board view 15
Schematic diagram 17

ONKYO
AUDIO COMPONENTS

SPECIFICATIONS

Power Output:	**60 watts per channel, min RMS, at 8 ohms, both channels driven from 20 Hz to 20 kHz, with no more than 0.06% THD.**	
	2 x 100 watts at 4 ohms, 1 kHz(DIN)	
	2 x 70 watts at 8 ohms, 1 kHz(DIN)	
Total Harmonic Distortion	0.06% at rated power	
IM Distortion	0.06% at rated power	
Damping Factor:	40 at 8 ohms	
Frequencey and Response:	15–30,000 Hz ±1 dB	
Input Sensitivity/Impedance:	Phono (MM):	2.5 mV/50 kohms
	Phono (MC):	350 μV/220 ohms
	Tuner/CD/AUX, Video:	150 mV/50 kohms
	Source Direct:	150 mV/50 kohms
	Tape/Play:	150 mV/50 kohms
Output Sensitivity/Impedance:	Tape/Rec:	150 mV/3 kohms (phono)
Phono Overload:	150 mV RMS at 1 kHz, 0.06% THD (MM) (REC)	
Bass Control:	±10 dB at 100 Hz	
Treble Control:	±10 dB at 10,000 Hz	
Selective Tone Control:	±15 dB at 50 Hz/±6 dB at 10 kHz	
Signal to Noise Ratio (IHF-A):	Phono (MM):	80 dB (5 mV input)
	Phono (MC):	70 dB (0.5 mV input)
	Source Direct (CD):	102 dB

General

Power Supply:	AC 220V, 50Hz
Dimensions (W) x (H) x (D):	435 x 143 x 287 mm
	17-1/8" x 5-5/8" x 11-5/16"
Weight:	7.2 kg, 15.9 lbs.

Remote Control Transmitter RC-143S

Transmitter:	Infrared
Signal range:	Approx. 5 meters, 16ft
Power supply:	Two "AA" batteries (1.5 V x 2)
Dimensions (W x H x D):	64 x 18 x 176 mm
	2-1/2" x 11/16" x 6-15/16"
Weight:	130 grams. 4.6 oz. (including batteries)

Specifications and features are subject to change without notice.

PRECAUTIONS

1. **Replacing the fuses**
   For continued protection against risk fire, replace only with same type and same rating fuse.

CIRCUIT NO.	PART NO.	DESCRIPTION
F902,F903	252075 or	2.5A-SE-EAK or
	252075CC	2.5A-SE-EAK, Primary fuse

ADJUSTMENT PROCEDURES

Adjustments and Checking the Protection Circuitry

1. Preparations

1) Place the unit on the workbench. (There should be about 15 mm of space between the base plate of the unit and the work surface.)
2) Set up the unit as follows.
   (1) No load
   (2) No signal
   (3) Volume turned all the way down
   (4) Speaker switch OFF
   (5) Power switch OFF

Note) Check the following points before making adjustments
   (1) The power switch should be OFF.
   (2) The interior of the unit should not be warm.

2. Idling current adjustment

1) Turn the power switch ON and allow the unit to warm up for about 10 minutes.
   (1) Ajust R529 (R530) so that the voltage at test point VCT-ID on the NAAF-3547 circuit board is 9.5mV±3.5mV

3. Check of operation of protection circuitry

1) Check of operation of protection relay.
   (1) Confirm that the relay turns ON approximately 5 seconds after the power switch is turned ON.
   (2) The relay should turn OFF approximately 0.5 seconds after the power switch is turned OFF.
2) Check of DC detection
   (1) Turn the power on with no load.
   (2) After the speaker relay turns ON, apply DC +1.5V to the CD input terminals. Confirm that the relay turns OFF.
   (3) Confirm that operation is the same as (2) above when an input of DC −1.5V is applied.

Note) Under no circumstances connect a load or short the speaker terminals when performing the above test.

3) Signal input from the circuit illustrated below with no load.
   (1) Confirm that the speaker relay does not turn OFF even when a 2 ohm load is connected when a peak value of 35V p-p is output.
   (2) Next, confirm that when a 1 ohm load is connected the speaker relay switches OFF and ON a couple of times and then stays OFF.

Note) The period before that relay stays OFF should not last for more than 10 second.
Relay OFF status can be canceled by switching the power OFF.

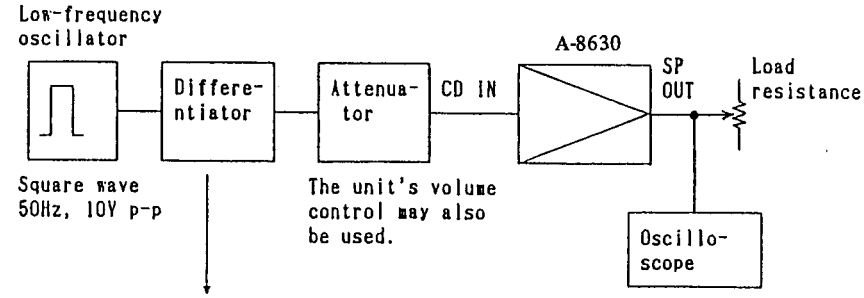

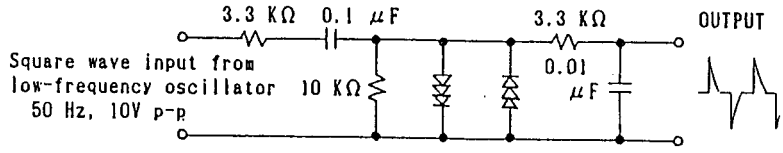

NOTE) Semi-fixed resistors enclosed in parentheses ( ) are for the right channel.

CHASSIS-EXPLODED VIEW

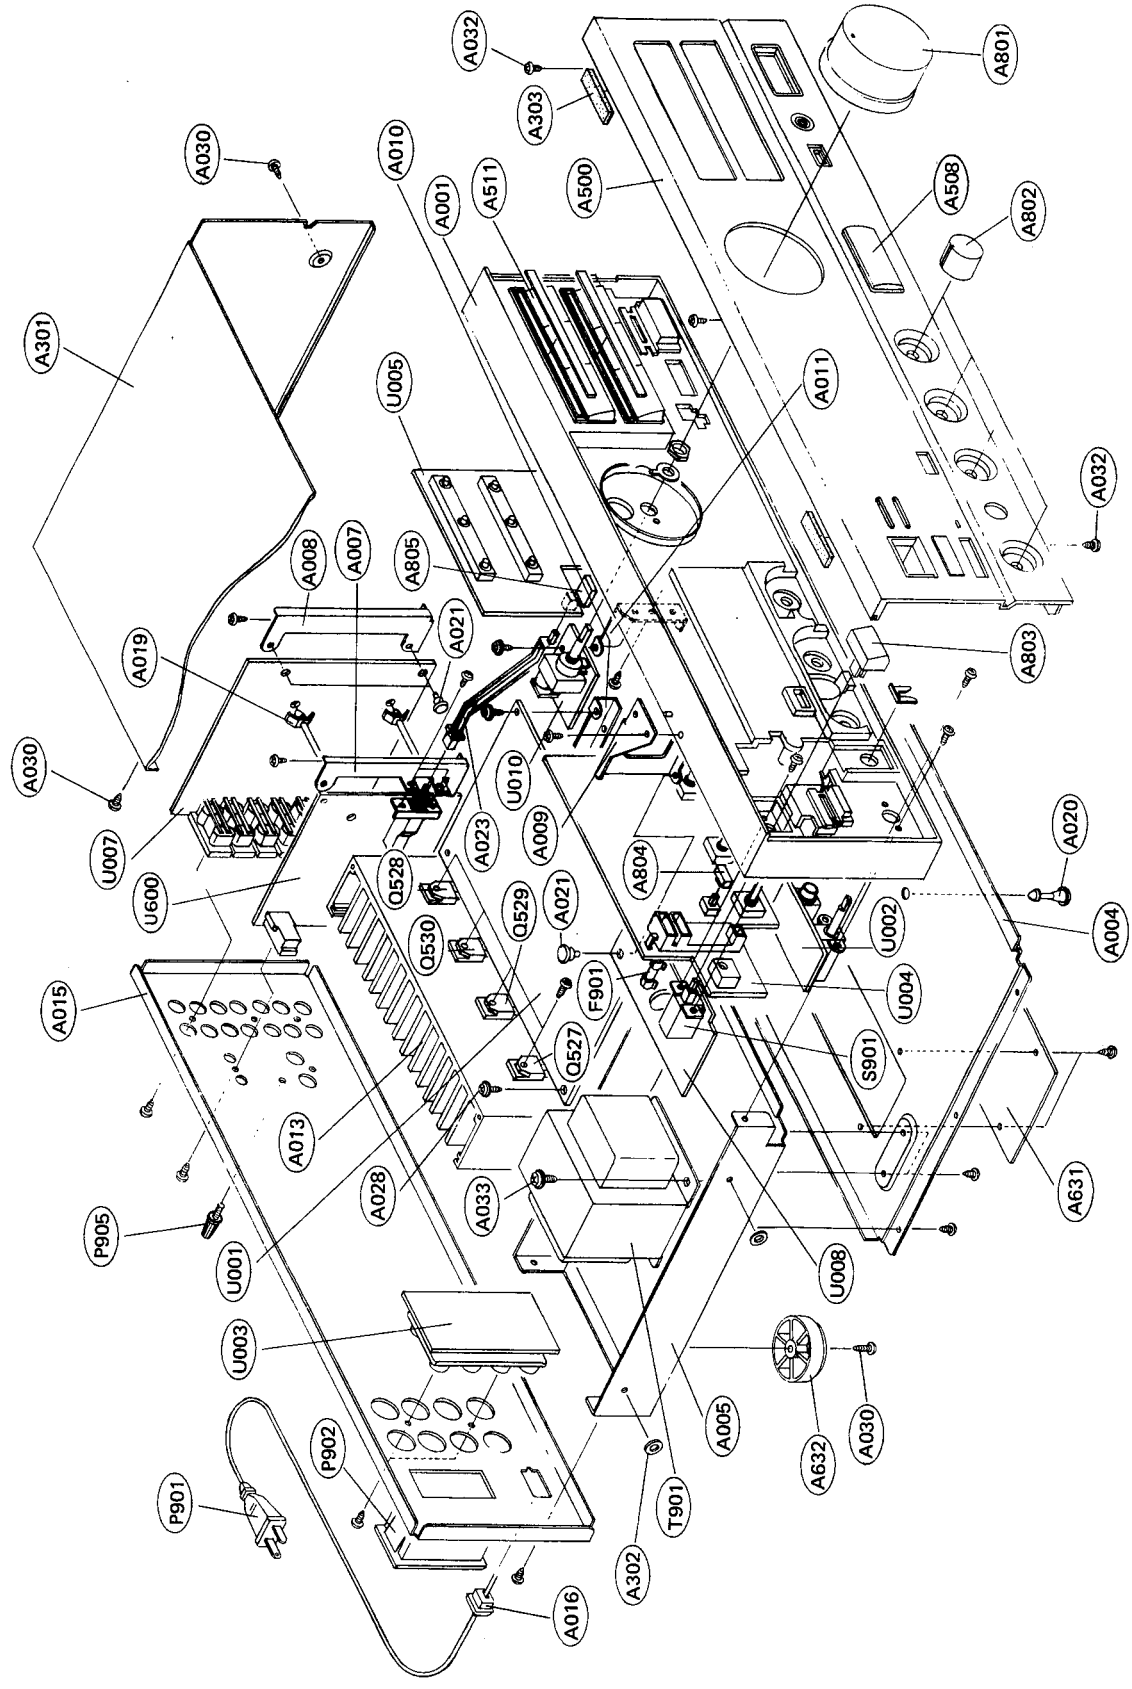

CHASSIS-EXPLODED VIEW-PARTS LIST

REF. NO.	PART NO.	DESCRIPTION
A001	27110499A	FRONT ANGLE ASS'Y [BLK]
(A001a)	27110476C	FRONT ANGLE [BLK]
(A001b)	28323652	KNOB (SEL) [BLK]
(A001c)	28323650	KNOB (SD) [BLK]
(A001d)	28323644	KNOB (ST) [BLK]
(A001e)	27190703A	HOLDER (LED)
A001	27110500B	FRONT ANGLE ASS'Y [SYL]
(A001a)	27110465D	FRONT ANGLE [SYL]
(A001b)	28323651	KNOB (SEL) [SYL]
(A001c)	28323649	KNOB (SD) [SYL]
(A001d)	28323643	KNOB (ST) [SYL]
A003	27100185	CHASSIS
A005	27130573B	BRACKET (PT)
A007	27141328	BRACKET (SW)
A008	27141329	BRACKET (SW)
A009	27141324	BRACKET (POW)
A010	27141332	BRACKET (PC)
A011	27141325	BRACKET (VR)
A013	27160241A	HEATSINK
A015	27121260	BACK PLATE
A016	27300750	BUSHING (CABLE)
A019	27190369	KGLS-22S, PC HOLDER
A020	27190511	KGLS-16R, PC HOLDER
A021	880009	NRP-345, REVET
A023	27273118	JOINT
A028	831130088	3TTW+8B,TAPPING SCREW
A030	834430088	3TTS+8BBC, TAPPING SCREW
A032	833430080	3TTP+8PBC, TAPPING SCREW
A033	830440089	4TTC+8CBC, TAPPING SCREW
A301	28184436	TOP COVER [BLK]
A301	28184435	TOP COVER [SYL]
A302	27270147	SPACER
A303	28140555	CUSHION
A500	1A171121	FRONT PANEL [BLK]
(A502)	27267597	GUIDE (POW) [BLK]
(A503)	27267591	GUIDE (TONE) [BLK]
(A504)	27267595A	GUIDE (SD) [BLK]
(A505)	28198726	FACKET (OP) [BLK]
(A506)	28198725	FACKET (SD) [BLK]
(A507)	28198727	FACKET [BLK]
A508	28135180	NAME PLATE [BLK]
A511	28191507	PLATE (SEL) [BLK]
A500	1A172121	FRONT PANEL [SYL]
(A502)	27267596	GUIDE (POW) [SYL]
(A503)	27267590	GUIDE (TONE) [SYL]
(A504)	27267594A	GUIDE (SD) [SYL]
A508	28135181	NAME PLATE [SYL]
A511	28191515	PLATE (SEL) [SYL]
A631	27170261	BOTTOM BOARD
A632	27175219	BOTTOM REG
A633	834430088	3TTS+8BBC, TAPPING SCREW
A634	833430080	3TTP+8PBC, TAPPING SCREW
A801	28323673	KNOB (VOL) [BLK]
A802	28323677A	KNOB (TONE) [BLK]
A803	28323241-1	KNOB (POW) [BLK]
A804	28323648	KNOB (STC) [BLK]
A805	28323646	KNOB (MC) [BLK]
A801	28323672	KNOB (VOL) [SYL]
A802	28323676A	KNOB (TONE) [SYL]
A803	28323249-1	KNOB (POW) [SYL]
A804	28323647	KNOB (STC) [SYL]
A805	28323645	KNOB (MC) [SYL]

REF. NO.	PART NO.	DESCRIPTION
Q527,Q528	2201703 or	2SC3855-O or
	2201704 or	2SC3855-Y or
	2201706	2SC3855-P, TRANSISTOR
Q529,Q530	2201693 or	2SA1491-O or
	2201694 or	2SA1491-Y or
	2201696	2SA1491-P, TRANSISTOR
⚠T901	2300441	NPT-1036G, POWER TRANSFORMER
⚠P901	253149	AS-CEE, POWER SUPPLY CABLE
⚠P902~P904	25050337	NSCT-2P164, AC SOCKET
P905	25060044	GROUND TERMINAL
⚠S901	25035550	NPS-111-L512P, POWER SWITCH
⚠F902,F903	252075 or	2.5A-SE-EAK or
	252075CC	2.5A-SE-EAK, FUSE
	29360405	T2.5A/250A, FUSE LABEL
U001	1A169547-3A	NAAF-3547-3A, MAIN CIRCUIT PC BOARD ASS'Y
U002	1A169548-3	NASW-3548-3, SPEAKER SWITCH PC BOARD ASS'Y
U003	1A169549-3A	NAETC-3549-3A, SPEAKER TERMINAL PC BOARD ASS'Y
U004	1A169550-2A	NADG-3550-2A, SYSTEM CONTROL CIRCUIT PC BOARD ASS'Y
U005	1A169551-2	NASW-3551-2, KEY SWITCH PC BOARD ASS'Y
U006	1A169552-2A	NAETC-3552-2A, EQUALIZER CIRCUIT PC BOARD ASS'Y
U007	1A169553-2A	NAAF-3553-2A, SELECTOR SWITCH CIRCUIT PC BOARD ASS'Y
U008	1A169554-2A	NAPS-3554-2A, POWER SWITCH CIRCUIT PC BOARD ASS'Y
U010	1A169556-2	NAETC-3556-2, VOLUME CONTROL CIRCUIT PC BOARD ASS'Y

NOTE
[B L K]: ONLY BLACK MODELS
[S I L]: ONLY SILVER MODELS

NOTE: THE COMPONENTS IDENTIFIED BY MARK ⚠ ARE CRITICAL FOR RISK OF FIRE AND ELECTRIC SHOCK. REPLACE ONLY WITH PARTS NUMBER SPECIFIED.

PRINTED CIRCUIT BOARD PARTS LIST

MAIN CIRCUIT PC BOARD (NAAF-3547-3A) PARTS LIST

CIRCUIT NO.	PART NO.	DESCRIPTION
	Transistors	
Q501,Q502	2212285 or	2SC2878-A or
	2212286	2SC2878-B
Q503~Q506	2211455 or	2SA1015-GR or
	2210803	2SA733-P
Q507,Q508	2211371 or	2SC2259-O-001 or
	2211372	2SC2259-O-002
Q509,Q510	2211732 or	2SC1845-F or
	2211733	2SC1845-E
Q511,Q512	2211255 or	2SC1815-GR or
	2210746	2SC945A-P
Q513,Q514	2211353 or	2SA949-O or
	2211354	2SA949-Y
Q515,Q516	2211633 or	2SC2229-O or
	2211634	2SC2229-Y
Q517,Q518	2211255 or	2SC1815-GR or
	2210746	2SC945A-P
Q523,Q524	2212653 or	2SC3421-O or
	2212654	2SC3421-Y
Q525,Q526	2212643 or	2SA1358-O or
	2212644	2SA1358-Y
Q531,Q532	2211732 or	2SC1845-F or
	2211733	2SC1845-E
Q651	2211455 or	2SA1015-GR or
	2212495	JA101-Q
Q652	2211792 or	2SA992-F or
	2211793	2SA992-E
Q653,Q654	2211732 or	2SC1845-F or
	2211733	2SC1845-E
Q655	2211255 or	2SC1815-GR or
	2212485	JC501-Q
Q913	2201754 or	2SD1913-R or
	2201755	2SD1913-S
	Diodes	
D501,D502	4000120	KB265, Varistor
D652	223163	1SS133
D911~D914	223897 or	P300DL or
	22380003	1N5402F
D917,D918	224151601 or	05AZ16X or
	224651601 or	HZ16EB1 or
	224451601	MTZ16A, Zener
D919	224150623 or	05AZ6.2Z or
	224650623 or	HZ6.2EB3 or
	224450623	MTZ6.2C, Zener
D931,D932	223880 or	GP101N4003 or
	223896	1N4003
D933	224150512 or	05AZ5.1Y or
	224650512 or	HZ5.1EB2 or
	224450512	MTZ5.1B, Zener
	Capacitors	
C501,C502	354741009	10 μF, 16V, Elect.
C503,C504	372121014	100 pF, 50V, Styrene
C505,C506,C653	354722219	220 μF, 6.3V, Elect.
C511,C512	354780229	2.2 μF, 50V, Elect.
C513,C514	372121024	0.001 μF, 50V, Styrene
C529,C530	371124734	0.047 μF, 50V, Mylar
C533,C534		
C535,C536	354781019	100 μF, 50V, Elect.
C652	354780479	4.7 μF, 50V, Elect.
C911,C912	3504206	10000 μF, 50V, Elect.
C913,C914	354761019	100 μF, 35V, Elect.
C919,C921	354742219	220 μF, 16V, Elect.
C922	354782219	220 μF, 50V, Elect.
C923	354741019	100 μF, 16V, Elect.
C925	354722219	220 μF, 6.3V, Elect.
C931	354742209	22 μF, 16V, Elect.
	Resistors	
R527,R528	442522704	27 Ω, 1/2W, Metal oxide film
R529,R530	5210064	N06HR10KBD, Semi-fixed
R535,R536	442529104	91 Ω, 1/2W, Metal oxide film
R539,R540	442522714	270 Ω, 1/2W, Metal oxide film
R541~R544	442520224	2.2 Ω, 1/2W, Metal oxide film
R545,R546	441720104	1 Ω, 2W, Metal oxide film
R547~R550	4000080 or	0.47 Ω, 5W or
	4500022	0.47 Ω, 5W, Metal plate
R559,R560	442520824	8.2 Ω, 1/2W, Metal oxide film
R564,R565	442520224	2.2 Ω, 1/2W, Metal oxide film
R658	441626814	680 Ω, 1W, Metal oxide film
R912	441623614	360 Ω, 1W, Metal oxide film
R915	441625614	560 Ω, 1W, Metal oxide film
R916	441623314	330 Ω, 1W, Metal oxide film
R917	441625114	510 Ω, 1W, Metal oxide film
R918,R919	441728204	82 Ω, 2W, Metal oxide film
R920	442524724	4.7 kΩ, 1/2W, Metal oxide film
R931	441621024	1 kΩ, 1W, Metal oxide film
R932	442521024	1 kΩ, 1/2W, Metal oxide film
R992	441626814	680 Ω, 1W, Metal oxide film
	Relay	
RL501	25065134	NRL-2P5A-DC24V-07
	Jumper sockets	
JL302a,JL901a	25050267	NSCT-3P95
JL903a		
JL902a	25050272	NSCT-8P100
	Heatsink	
	27160229	
	Bracket	
	27141059	Ground

SPEAKER SWITCH PC BOARD (NASW-3548-3) PARTS LIST

CIRCUIT NO.	PART NO.	DESCRIPTION
	Coils	
L571,L572	231001	S-1.3B
	Resistors	
R571,R572	442520564	5.6 Ω, 1/2W, Metal oxide film
R573,R574	441623914	390 Ω, 1W, Metal oxide film
	Switch	
S571	25030290	NRSF-144-25SS
	Stereo jack	
P572	25045164	HLJ-4317-01-3020

SPEAKER TERMINAL PC BOARD (NAETC-3549-3A) PARTS LIST

CIRCUIT NO.	PART NO.	DESCRIPTION
	Terminal	
P571	25060134	NTM-8PDMN-063

SYSTEM CONTROL CIRCUIT PC BOARD (NADG-3550-2A) PARTS LIST

CIRCUIT NO.	PART NO.	DESCRIPTION
	ICs	
Q301,Q321	22240050 or	μPC4570C or
	22240191	NJM4565DD
Q701	22240254	LC6520H-4030
Q751	22240243	LC6527C-3987
	Transistors	
Q702	2211455 or	2SA1015-GR or
	2212495	JA101-Q
Q703,Q704	2211255 or	2SC1815-GR or
Q752,Q753	2212485	JC501-Q
Q705	2211255 or	2SC1815-GR or
	2212485	JC501-Q
	Diodes	
D701	223163	1SS133
D702	221450562 or	0.5AZ5.6Y or
	224650562 or	HZ5.6EB2 or
	224450562	MTZ5.6B, Zener
D703,D751	225141	SEL2213C, LED
D711	225137CG or	SEL2413ECG or
	225137DG or	SEL2413EDG or
	225137DY	SEL2413EDY, LED
D712,D752	223163	1SS133
D714~D716		
D753		
	Osc. elements	
X701,X751	3010150	CST4.00MGW
	Capacitors	
C301,C302	354780229	2.2 μF, 50V, Elect.
C305,C306		
C323,C324		
C307,C308	354780339	3.3 μF, 50V, Elect.
C321,C322	371128224	8200 pF, 50V, Mylar
C325,C326	354780109	1.0 μF, 50V, Elect.
C703,C753		
C327,C328	371123934	0.039 μF, 50V, Mylar
C331,C332	371122234	0.022 μF, 50V, Mylar
C701	3000051	0.047 F, 5.5V, SUPER
C705,C751	354741009	10 μF, 16V, Elect.
	Resistors	
R315	5104228	N11RHC250KWT22Z, Variable
R321,(R322)	5104229	N14RHC100KWT22Z, Variable
R335,(R336)		
R701	49163473404	47 KΩ×4, Network
	Switches	
S321	25035588	NPS-142-L550
S708	25035548	NPS-111-S510
	Holder	
	27190701A	(LED,OP)

KEY SWITCH PC BOARD (NASW-3551-2) PARTS LIST

CIRCUIT NO.	PART NO.	DESCRIPTION
	Diodes	
D704~D710	225137CG or	SEL2413ECG or
	225137DG or	SEL2413EDG or
	225137DY	SEL2413EDY, LED
	Switches	
S701~ S707	25035548	NPS-111-S510
	Holders	
	27190702A	(LED, SEL)
	27190697	(LED, ST)

EQUALIZER CIRCUIT PC BOARD (NAETC-3552-2A) PARTS LIST

CIRCUIT NO.	PART NO.	DESCRIPTION
	ICs	
Q101,Q102	222570 or	NJM4560DX or
	22240191	NJM4565DD
	Capacitors	
C101,C102	372121014	100 pF, 50V, Styrene
C103,C104	372123314	330 pF, 50V, Styrene
C107,C108	354741009	10 μF, 16V, Elect.
C111,C112	354722219	220 μF, 6.3V, Elect.
C113,C114	371126234	0.062 μF, 50V, Mylar
C115,C116	371121834	0.018 μF, 50V, Mylar
C119,C120	354721019	100 μF, 6.3V, Elect.
C131,C132	354742219	220 μF, 16V, Elect.
	Coils	
L101,L102	231030	NCH-1070
	Switch	
S101	25035608	NPS-142-L570
	Terminal	
P101	25045211	NPJ-2PDBL91
	Miniature jack	
P103	25045172	HSJ-1003-01-020

SELECTOR SWITCH CIRCUIT PC BOARD (NAAF-3553-2A) PARTS LIST

CIRCUIT NO.	PART NO.	DESCRIPTION
	ICs	
Q201	22240079	LC7821
Q202	22240025	LC4966
	Transistors	
Q203,Q204	2212285 or	2SC2878-A or
	2212286	2SC2878-B
Q801,Q811	2211455 or	2SA1015-GR or
	2212495	JA101-Q
Q802,Q812	2211255 or	2SC1815-GR or
	2212485	JC501-Q
	Diodes	
D801	224150621 or	05AZ6.2X or
	224650621 or	HZ6.2EB1 or
	224450621	MTZ6.2A, Zener
	Capacitors	
C804	354780229	2.2 μF, 50V, Elect.
C805,C811	354780109	1 μF, 50V, Elect.
C806,C807	354744709	47 μF, 16V, Elect.
	Terminals	
P201	25045213	NPJ-6PDBL-92

CIRCUIT NO.	PART NO.	DESCRIPTION
P202,P203	25045171	NPJ-4PDBL-65

POWER SWITCH CIRCUIT PC BOARD (NAPS-3554-2A)
PARTS LIST

CIRCUIT NO.	PART NO.	DESCRIPTION
	Diode	
D905	223163	1SS133
	Capacitors	
C901	3500065A	0.01 μF, AC400V/125V, IS
C902	3500065A	0.01 μF, AC400V/125V, IS
	Switch	
S901	25035550	NPS-111-L512P
	Terminal	
	25060092	NTM-1S33
	Relay	
RL901	25065341	NRL-1P15A-DC24V-047
	Fuse holder & Label	
F902a	25050065	YSH4037, Fuse holder
F902b	29360405	T2.5A/250V, Fuse label
F903a	25050065	YSH4037, Fuse holder
	29360626-1	Label, Caution

VOLUME CONTROL CIRCUIT PC BOARD (NAETC-3556-2)
PARTS LIST

CIRCUIT NO.	PART NO.	DESCRIPTION
	IC	
Q351	222963	LB1630
	Capacitor	
C353	354741009	10 μF, 16V, Elect.
	Resistors	
R351,(R352)	5104234	N16RGM50KA30F, Variable
	Bracket	
	27141059	Ground

IC BLOCK DIAGRAM

LC6520H-4030 (Micro computer)

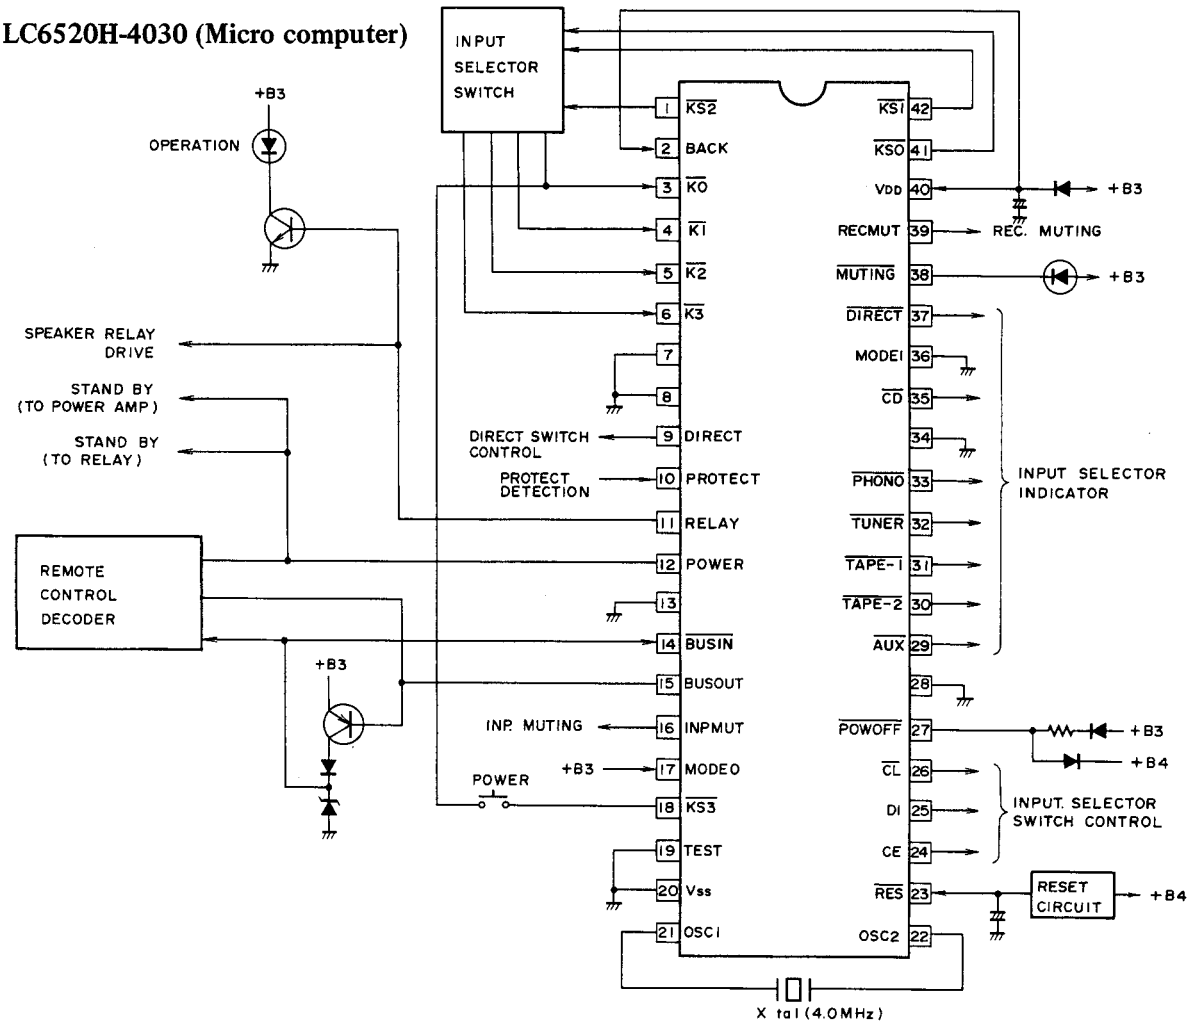

Pin No.	Pin name	Symbol	Function
1	PA2	$\overline{KS2}$	Key scan output terminal.
2	PA3	$\overline{BACK}$	Input terminal for initial settings. Fixed at "H".
3 4 5 6	PB0 PB1 PB2 PB3	$\overline{K0}$ $\overline{K1}$ $\overline{K2}$ $\overline{K3}$	Key input terminals.
7	PC0	—	Fixed at "L".
8	PC1	—	Fixed at "L".
9	PC2	DIRECT	DIRECT switch on is "H".
10	PC3	PROTECT	Protect input terminal.
11	PD0	RELAY	Speaker relay control terminal. Switches to "H" 5 second after power is turned on. Immediately switches to "L" when POW OFF terminal switches from "H" to "L".
12	PD1	POWER	Standby control.
13	PD2	—	Ground
14	PD3	BUS-IN	System code input terminal. Active: "H"
15	PE0	$\overline{BUSOUT}$	System code output terminal. Active: "L"
16	PE1	INPUMT	Input selector muting output terminal.
17	PE2	MODEO	Fixed at "H". Initial setting when power is turned on.
18	PE3	$\overline{KS3}$	
19	TEST	TEST	Ground
20	V_{SS}	V_{SS}	Ground
21 22	OSC1 OSC2	OSC1 OSC2	Ceramic oscillator connector terminals (4 MHz).

23	$\overline{RES}$	$\overline{RES}$	RESET input terminal.
24	PF0	$\overline{CE}$	Chip-enable output terminal. Connected to analog switch CE terminal.
25	PF1	$\overline{DI}$	Serial data output terminal. Connected to analog switch DI terminal.
26	PF2	$\overline{CL}$	Serial data output terminal. Connected to analog switch CL terminal.
27	PF3	$\overline{POWOFF}$	Power off sensor input terminal.
28	PG0	—	Ground
29 30 31 32 33 35	PG1 PG2 PG3 PI0 PI1 PI3	$\overline{AUX}$ $\overline{TAPE\text{-}2}$ $\overline{TAPE\text{-}1}$ $\overline{TUNER}$ $\overline{PHONO}$ $\overline{CD}$	INPUT SELECTOR display output terminals. Input selector setting position is "L".
34	PI2	—	Ground
36	PJO	MODE1	Power-on initial setting input terminal. Fixed at "L",
37	PJ1	$\overline{DIRECT}$	Direct display output terminal.
38	PJ2	—	Muting display output terminal.
39	PJ3	RECMUT	Muting control output terminal for REC. output.
40	V_{DD}	V_{DD}	Power supply terminal (+5V).
41 42	PA0 PA1	$\overline{KS0}$ $\overline{KS1}$	Key scan output terminals.

LC7821 (Analog switch)

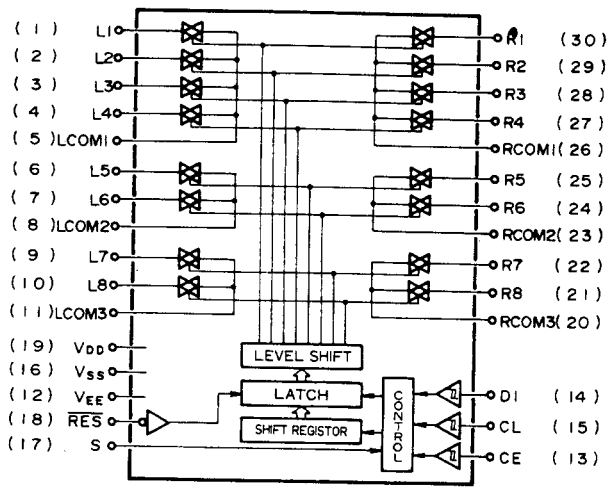

LC4966 (Switch)

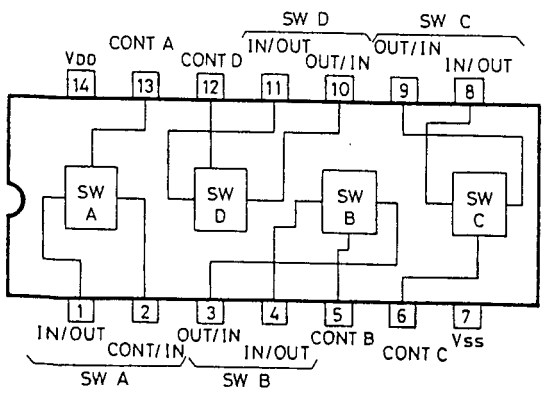

LB1630 (Motor drive)

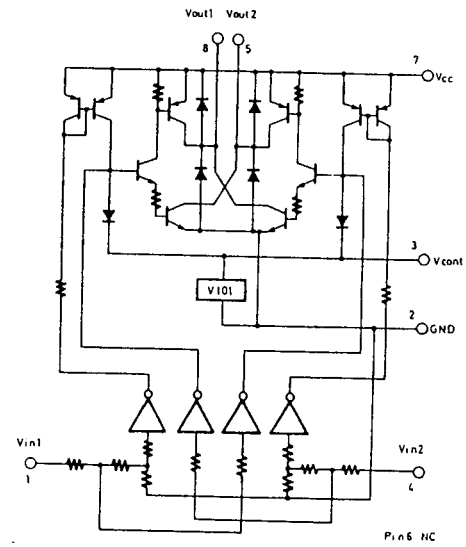

TRUTH TABLE

IN1	IN2	OUT1	OUT2	MOTOR
H	L	H	L	Normal
L	H	L	H	Reverse
H	H	OFF	OFF	Wait
L	L	OFF	OFF	Wait

LC6527C (Remoto controlle decoder)

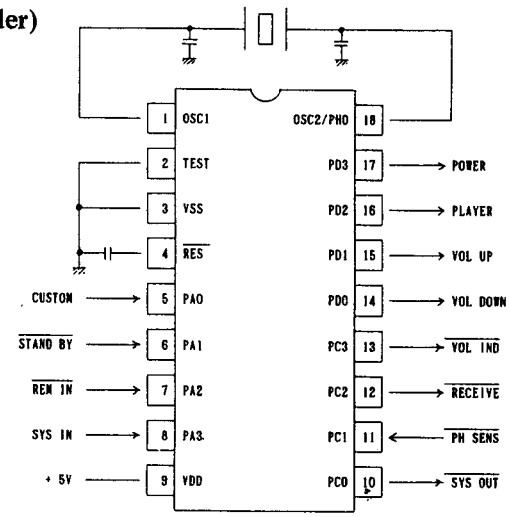

Pin No.	Pin name	Symbol	Function
1	OSC1	OSC1	Ceramic oscillator connector terminal. 4 MHz, 1/3 division.
2	TEST	TEST	Test terminal. Connected to V_{SS}.
3	V_{SS}	V_{SS}	Ground terminal
4	RES	RES	Reset terminal.
5	PA0	CUSTOM	Decoded input terminal with switchable custom codes and operations. Custom input / Custom code / Operation L / D26D / System (export) H / D225 / Tuner This terminal is read when power is turned on and the above initial settings are carried out.
6	PA1	STAND BY	Standby condition sensor terminal. Only the POWER code is decoded when STAND BY input is "L".
7	PA2	REM IN	Remote control signal input terminal. Active: "L". The photo-sensor output is connected to this terminal.
8	PA3	SYS IN	System code input terminal. Active: "H". Output system codes are monitored at this terminal.
9	V_{DD}	V_{DD}	Power supply (+5V) terminal.
10	PC0	SYS OUT	System code output terminal. Active: "L". This terminal output the appropriate system code in response to input from the remote control.
11	PC1	PH SENS	PHONO sensor input terminal. Active: "L". This terminal is valid during system. The remote control K64 code is decoded only when this terminal is "L".
12	PC2	RECEIVE	RECEIVE display output terminal. Active: "L". "L" when remote control codes for decoding are being input.
13	PC3	VOL IND	VOLUME indicator output terminal. Active: "L". Normally "L". Outputs waveform which is "H" for 250 ms then "L" for 250 ms during VOLUME UP or VOLUME DOWN output.
14	PD0	VOL DOWN	VOLUME DOWN control output terminal. Active: "H". Output is "H" when remote control K4 code is input.
15	PD1	VOL UP	VOLUME UP control output terminal. Active: "H". Output is "H" when remote control K3 code is input.
16	PD2	PLAYER	PLAYER control output terminal. Active: "H". This terminal is valid during system. Output is "H" for 200 ms if remote control K64 code is input when PH SENS input is "L".
17	PD3	POWER	POWER control output terminal. Active: "H". Reverses output whenever remote control K5 code is input.
18	OSC2/PHO	OSC2	Ceramic oscillator connector terminal. 4 MHz 1/3 division.

BLOCK DIAGRM

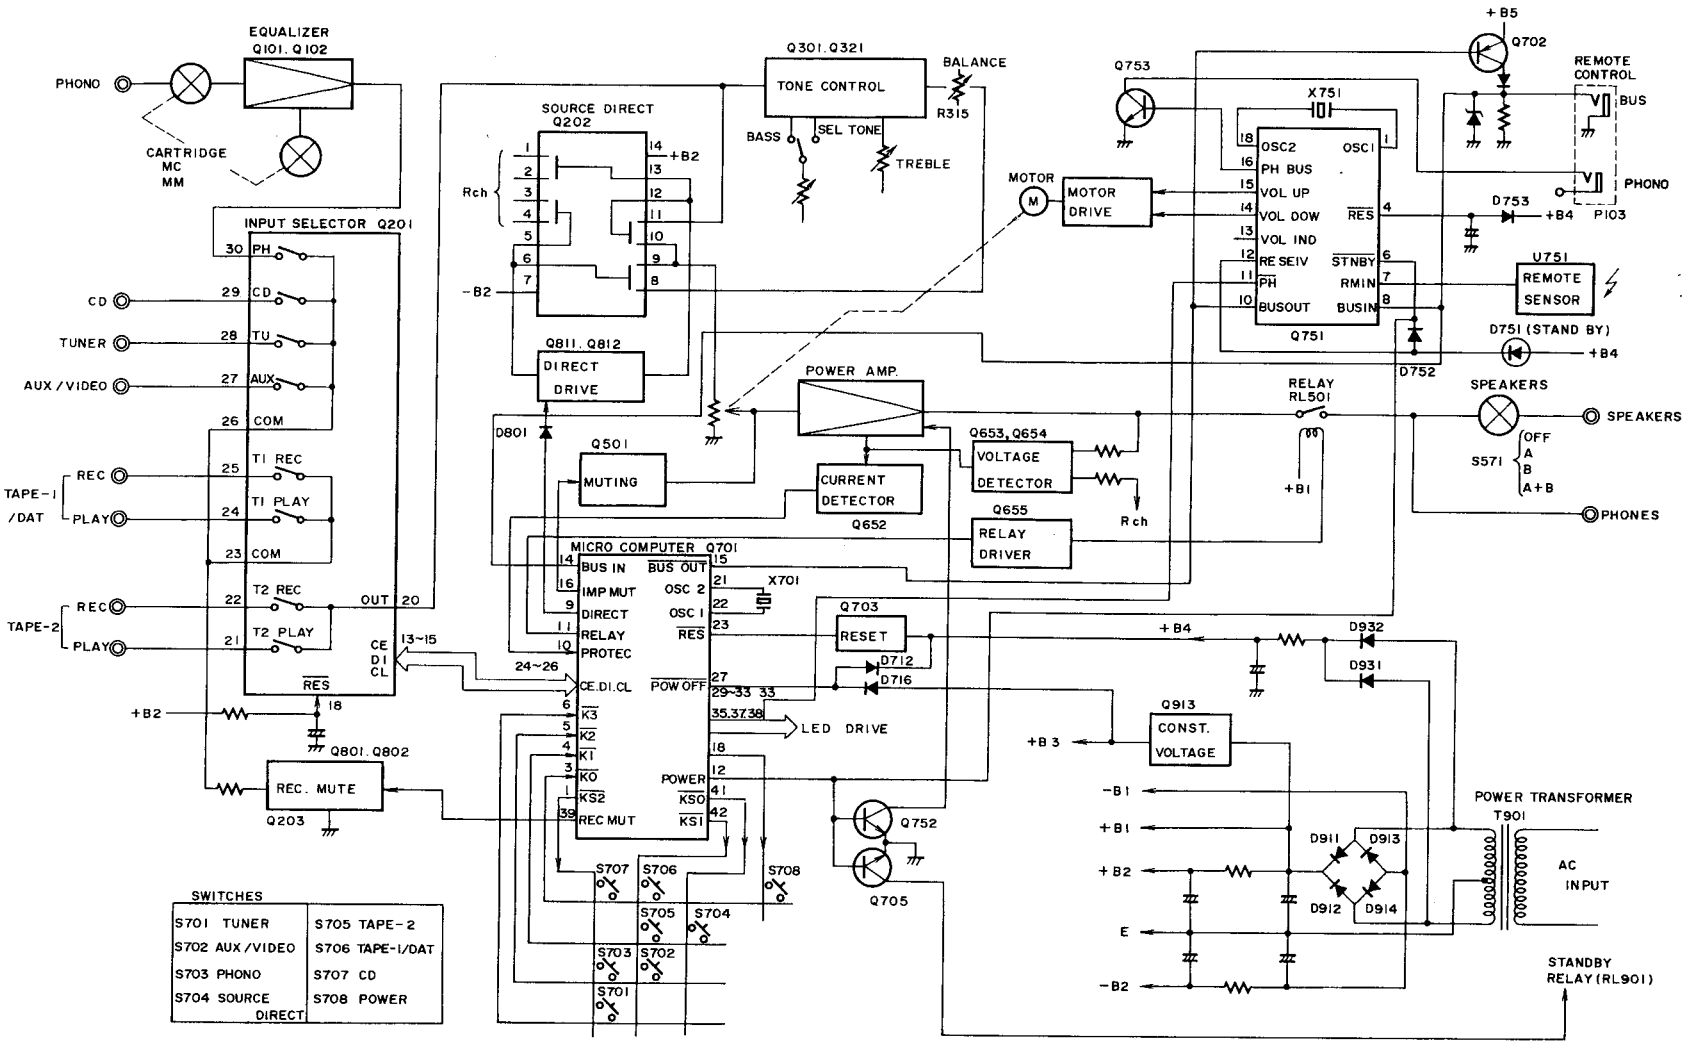

PARTS LIST OF PACKING

REF. NO.	PART NO.	DESCRIPTION
A851	29051922	MASTER CARTON BOX [BLK]
A851	29051923	MASTER CARTON BOX [SYL]
A852	29091322B	PAD, LEFT
A853	29091323B	PAD, RIGHT
A854	261504	W=30 mm, PAPER TAPE
A865	29100063	750 × 580mm, POLY-VINYL BAG
A866	282301	SEALING HOOK
A867	260012	W=50 mm, DAMPLON TAPE
	29355133	CAUTION (DBP)

ACCESSARY BAG ASS'Y

29341395	INSTRUCTION MANUAL
29365020A	WARRANTY CARD
29100097	250 x 350, POLY-VINYL BAG
24140143	RC-143S, REMOTE CONTROL UNIT
3010054	UM-3, FOUR BATTERIES
2010169	3.5 MINI PLUG
29100094A	POLY-VINYL BAG

NOTE
[B L K]: ONLY BLACK MODELS
[S Y L]: ONLY SILVER MODELS

SYSTEM CONNECTIONS

General
Switch the main power switch off before performing connections.
Also be sure to perform left and right channel connections properly.

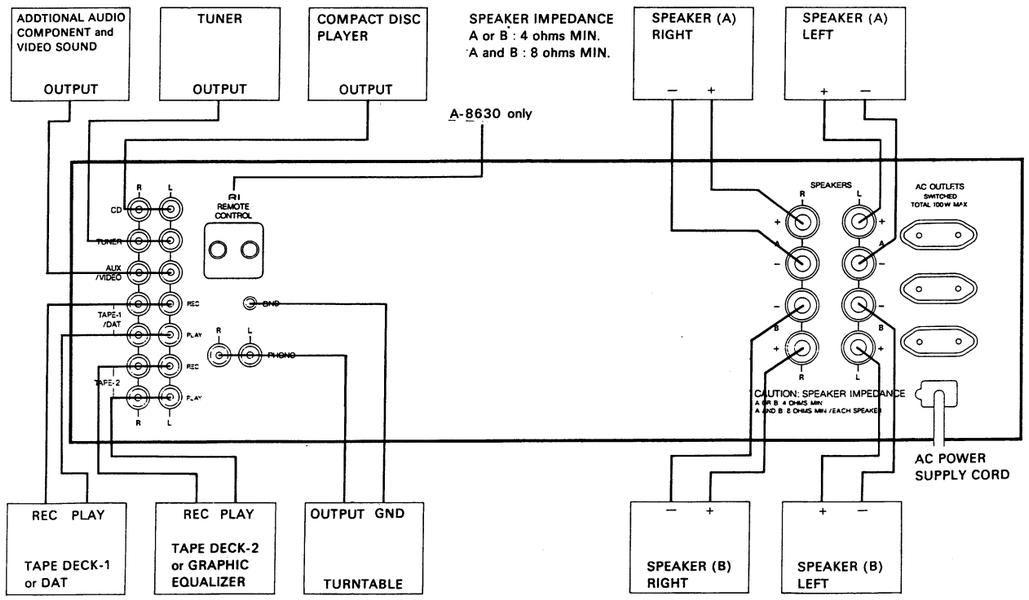

FRONT PANEL FACILITIES

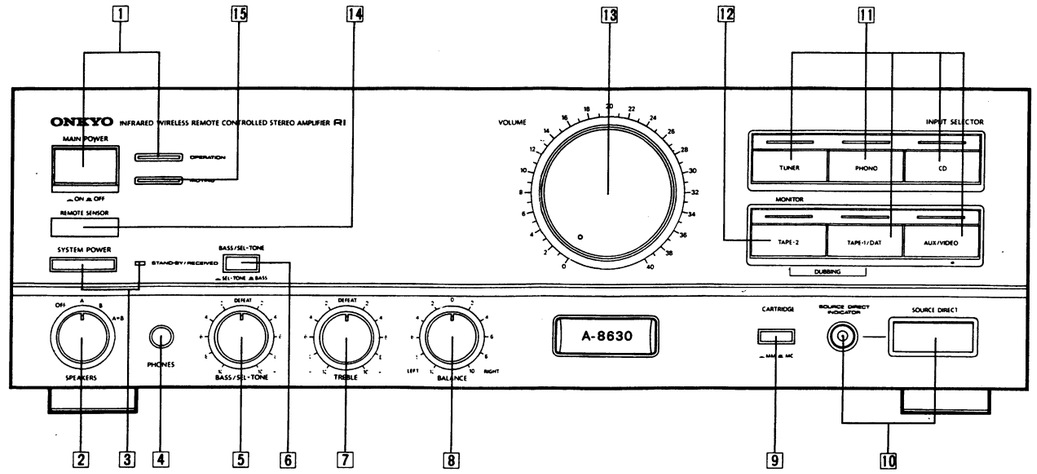

Remote control transmitter RC-143S

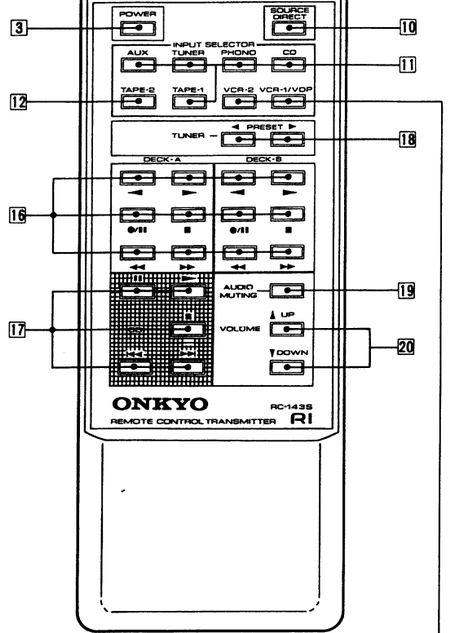

This key does not operate on the A-8630

1. Main power switch and operation indicator (MAIN POWER)
2. Speaker selector (SPEAKERS)
   OFF, A, B, A+B
3. System power button and standby/received indicator (SYSTEM POWER and STANDBY/RECEIVED)
4. Headphone jack (PHONES)
5. Bass control/Selective tone control (BASS/SEL-TONE)
6. Bass/Selective tone switch (BASS/SEL-TONE)
7. Treble control (TREBLE)
8. Balance control (BALANCE)
9. Cartridge selector (CARTRIDGE)
10. Source direct and indicator (SOURCE DIRECT)
11. Input selector and indicators (INPUT SELECTOR)
    TUNER, PHONO, CD, TAPE-1/DAT, AUX/VIDEO
12. Tape monitor and indicator (TAPE-2/MONITOR)
13. Volume control (VOLUME)
14. Remote control sensor
15. Muting indicator

Remote control transmitter controls (RC-143S)
16. Tape operation keys (DECK-A, DECK-B)
    REVERSE PLAY, FORWARD PLAY, REC PAUSE, STOP, FAST REWIND, FAST FORWARD
17. CD Operation keys (CD)
    PAUSE, PLAY, STOP, DOWN, UP
18. Tuner operation keys (PRESET)
19. Audio muting key (AUDIO MUTING)
20. Volume keys (UP, DOWN)

PRINTED CIRCUIT BOARD VIEW FROM BOTTOM SIDE

NADG-3550-2A

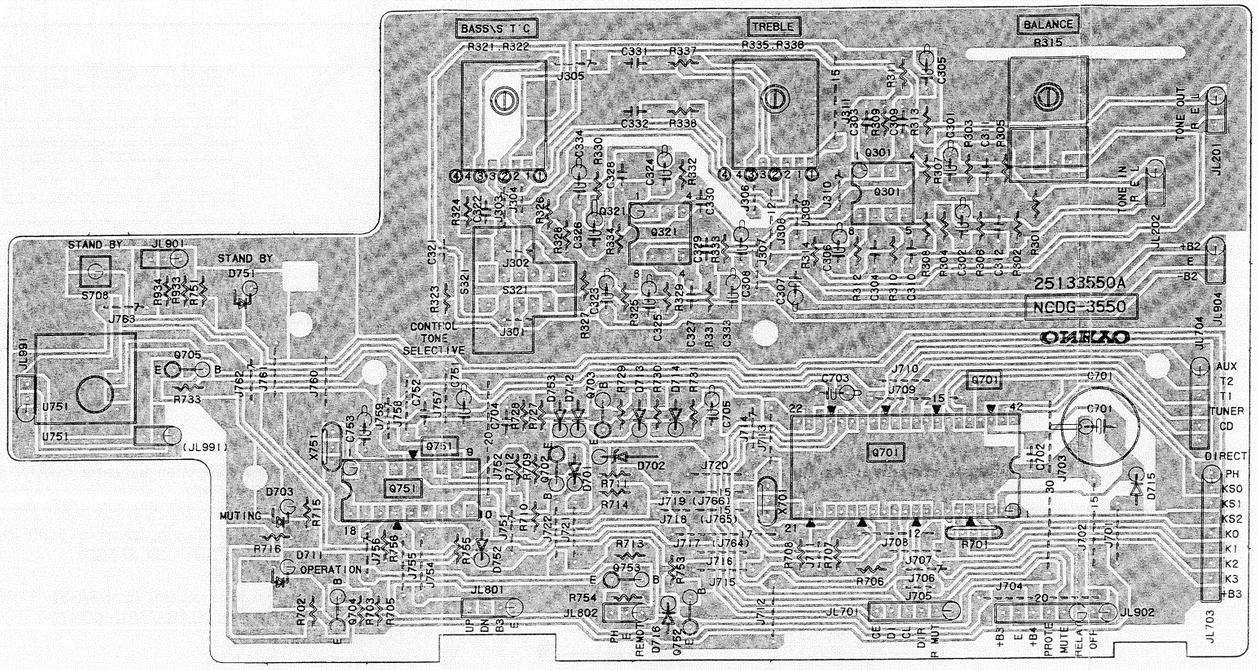

NAETC-3552-2A

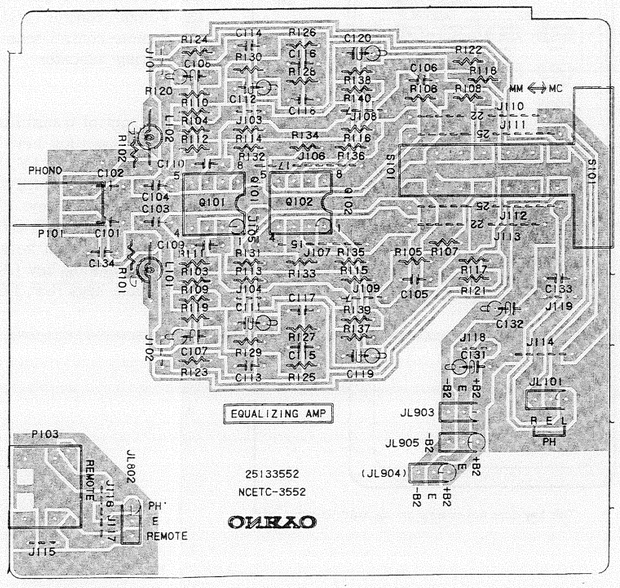

NASW-3551-2

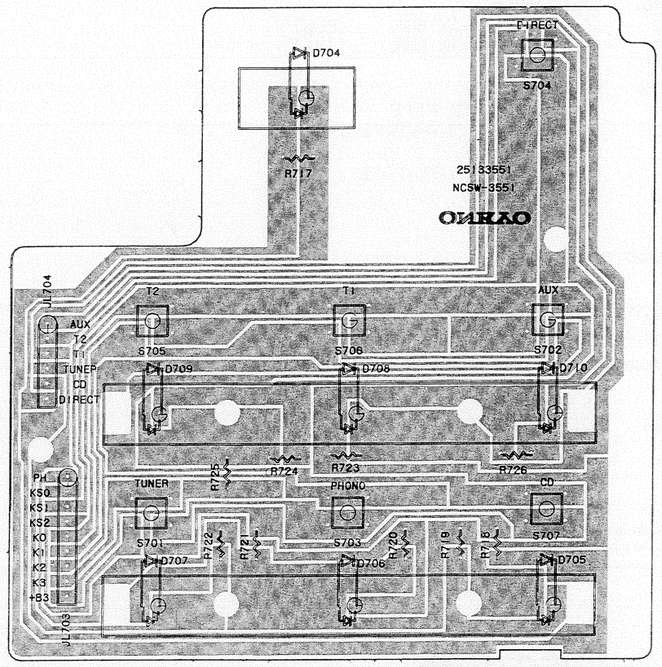

NAAF-3553-2A

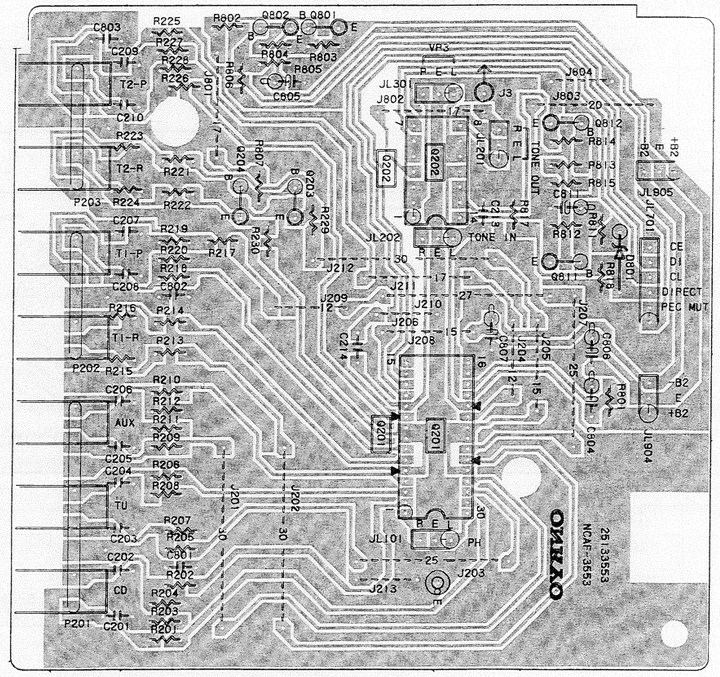

SCHEMATIC DIAGRAM

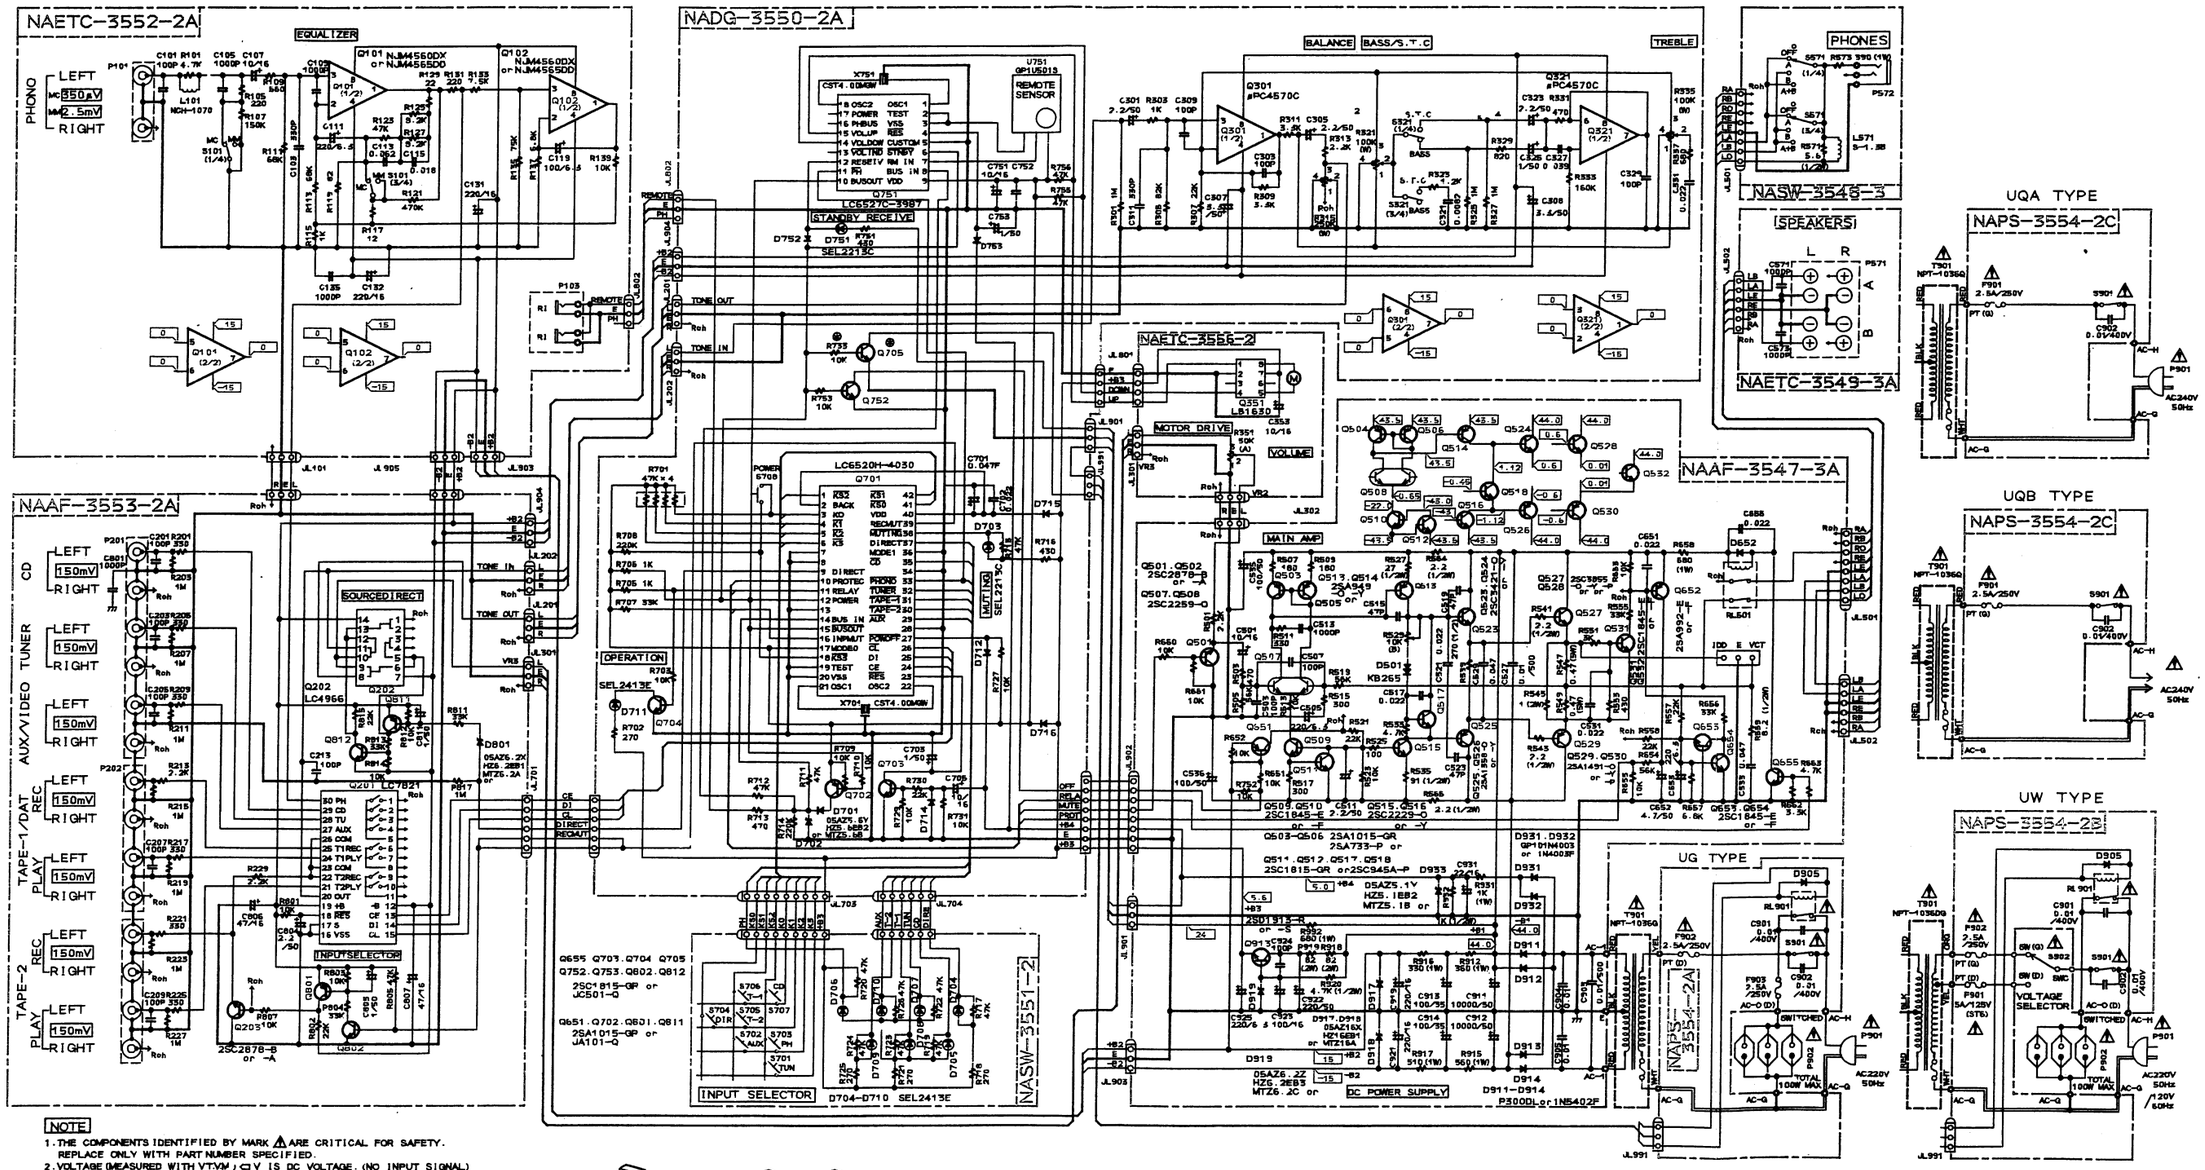

ONKYO CORPORATION

NAAF-3547-3A

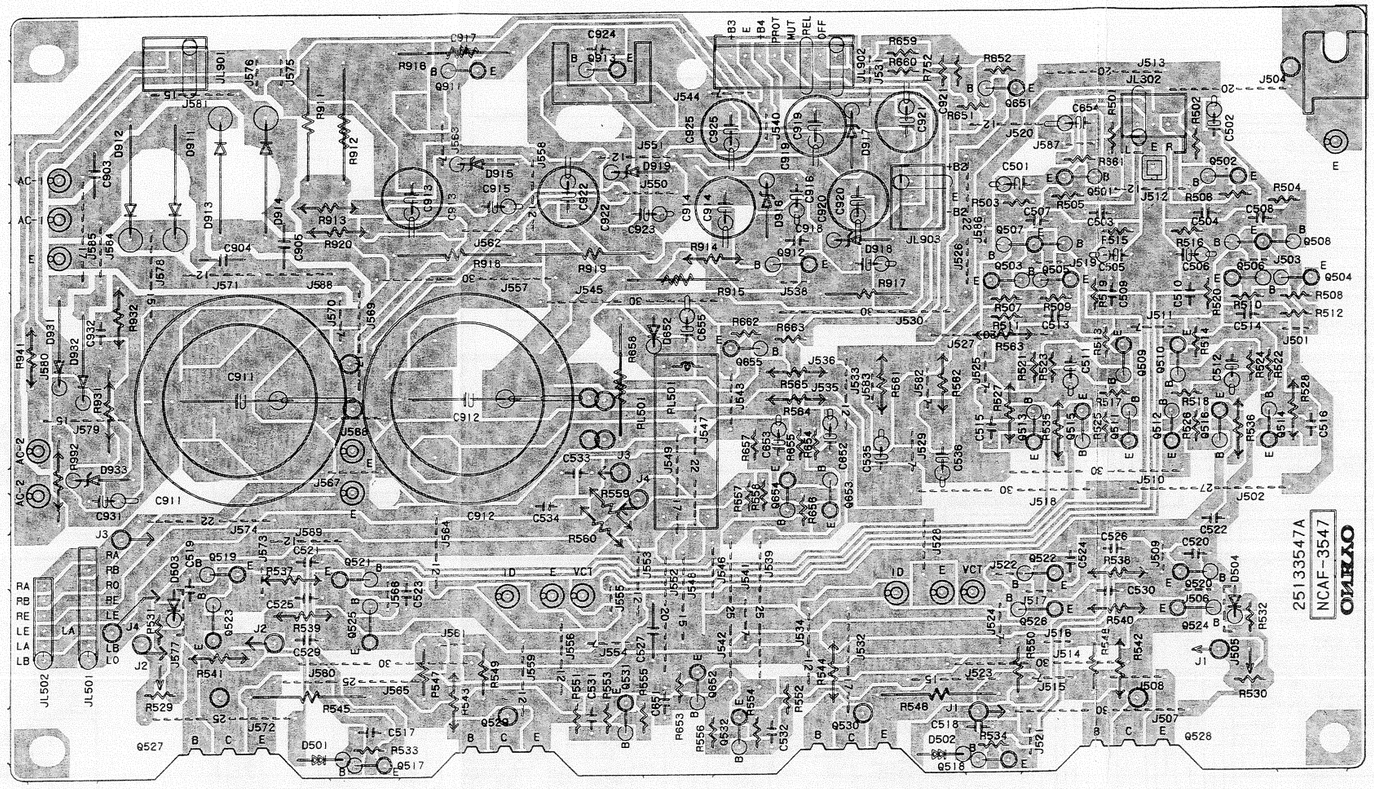

NAAF-3549-3A

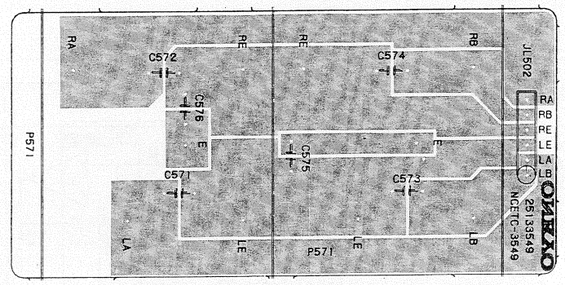

NAPS-3554-2A

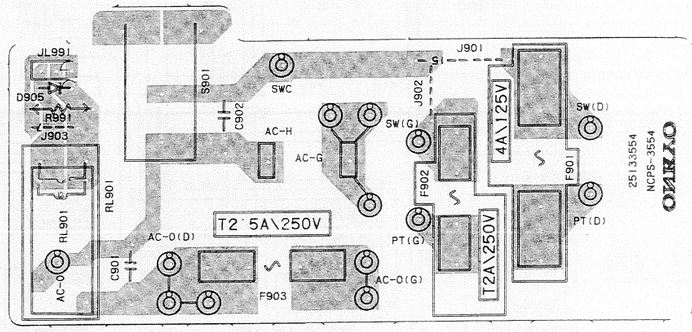

NASW-3548-3

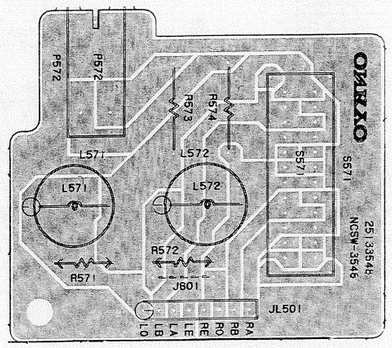

NAETC-3556-2